


BOSTITCH™ Konnect™

Rails & Kit Installation

Congratulations on the purchase of your Bostitch® Konnect™ product!

Please read these instructions completely and carefully before using this product. Keep this instruction sheet for future reference.

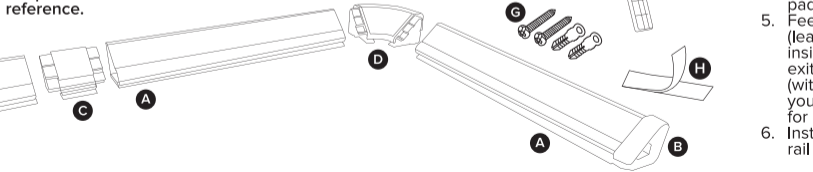

RAIL PARTS & ACCESSORIES

Kit and rail contents vary. Not all accessories are included. Please refer to your item packaging for included contents.

- A. Cable Management Rail
- B. End Cap
- C. Rail Extender
- D. Corner Connector
- E. Cubicle Hanger
- F. Slatwall Hooks
- G. Drywall Screws & Drywall Anchors
- H. Hook & Loop Fastener Strips

Visit BostitchOffice.com for instructional videos and more information.

DESKTOP INSTALLATION

1. Clean your desktop using an alcohol based cleaning solvent and wipe dry
2. Determine your layout by considering the configuration of your desk; Take into consideration any corners, grommet holes and wires that may need to be routed
3. Remove all rail parts (rails, end caps, extenders, connectors) from the original packaging and lay them out in the desired locations (see **FIG. A**)
4. Secure all end caps, rail extenders and corner connectors to the rails
NOTE: Do not remove any backing from the adhesive pads as this will come later
5. Feed all desired cords through the front of the rails (leaving any plugs outside) and run them through the inside of the rail (see **FIG. B**) until reaching the desired exit point at either the front, back or end of the rail (with end caps removed) depending on the location of your power source (see **CABLE MANAGEMENT TIPS** for more information)
6. Install any powered Konnect™ accessories onto the rail in the desired location and route that item's cords



FIG. A



FIG. B

(see each item's instruction manual for additional instructions)

7. Secure the rail extenders and/or corner connectors to the desktop:
 - **NOTE:** For easier access to the adhesive pads, disconnect any rail extenders and/or corner connectors secured in step 4
 - Starting on the left side of the system and securing one-by-one, peel the protective backing from the bottom of each rail extender and/or corner connector to reveal the adhesive pad
 - Push the ends of the extenders and/or connectors into the ends of the rails (see **FIG. C**) and once secured, press the extender and/or connector firmly onto the desktop to secure
8. Secure the end caps to the desktop:
 - Starting on the left side of the system, secure all end caps using the process outlined in step 7 (see **FIG. D**)
9. Secure all remaining (non-powered) Konnect™ accessories to the rail including storage bins, tape dispensers, etc. (see **FIG. E**)

Some desktops that are not level or have a textured surface may require additional mounting security. If required, adhere the provided hook and loop fastener strips to the bottom of each cord management real near the left and right end caps.



FIG. C



FIG. D

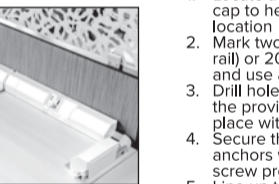


FIG. E

WALL MOUNT INSTALLATION

This type of installation is intended for individual cable management rails (12" or 21.5" inches only) and cannot be applied to rails linked together by extenders. This installation type is not ideal for cord management. Before starting, be sure that the left and right end caps are already secured to the rail.

1. Locate the screw hole on the back of each end cap to help determine the desired mounting location
2. Mark two spots approximately 11.25" (for the 12" rail) or 20.75" (for the 21.5" rail) from one another and use a level to draw a connecting line
3. Drill holes using a 3/16" bit (see **FIG. F**) and insert the provided wall anchors, gently tapping into place with a finishing hammer, if needed
4. Secure the provided mounting screws into the anchors with a screwdriver, leaving 1/8" of the screw proud from the wall (see **FIG. G**)
5. Line up the screw holes on the end caps and hang the rail over the mounted screws
6. Secure all Konnect™ accessories to the rail including storage bins, tape dispensers, etc. (see **FIG. H**)

WARNING: Do not exceed 10 lbs. of weight on the rail.

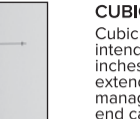


FIG. F

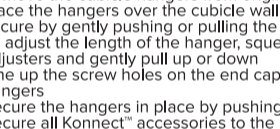


FIG. G

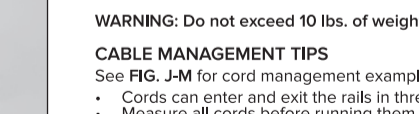


FIG. H

CUBICLE MOUNT INSTALLATION

Cubicle hangers sold separately. This type of installation is intended for individual cable management rails (12" or 21.5" inches only) and cannot be applied to rails linked together by extenders. This installation type is not ideal for cord management. Before starting, be sure that the left and right end caps are already secured to the rail.

1. Remove the cubicle hangers from original packaging
2. Place the hangers over the cubicle wall and loosely secure by gently pushing or pulling the top adjuster
3. To adjust the length of the hanger, squeeze the side adjusters and gently pull up or down
4. Line up the screw holes on the end caps and hang the rail over the notches on the cubicle hangers
5. Secure the hangers in place by pushing together the top adjuster from step 3
6. Secure all Konnect™ accessories to the rail including storage bins, tape dispensers, etc. (see **FIG. I**)

WARNING: Do not exceed 10 lbs. of weight on the rail.

CABLE MANAGEMENT TIPS

- See **FIG. J-M** for cord management examples.
- Cords can enter and exit the rails in three locations: the front, ends and back
 - Measure all cords before running them to ensure they will reach the desired power source

- Insert the cord furthest from the power outlet first
- Take into consideration all grommet holes and spaces at your desk where cords can exit the cord management



FIG. I

- For troubleshooting, questions and customer care, please visit us at BostitchOffice.com or contact us at 1-800-343-9329.

USA & Canada:
Manufactured under license by:
Amax Incorporated
East Greenwich, RI 02818
800.343.9329